


用户手册 USER GUIDE


ICE-SD60X2

单光驱位双DDC水箱
Single 5.25" driver bay slot
Dual DDC pump reservoir




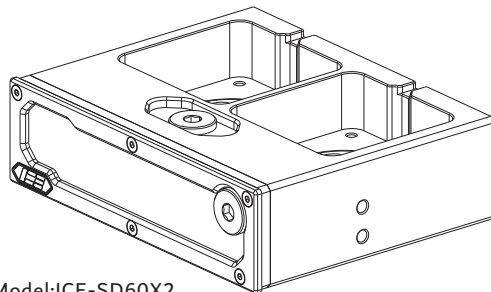


Model: ICE-SD60X2
P/N: IDR-2DB-DDC


Contents (配件清单)

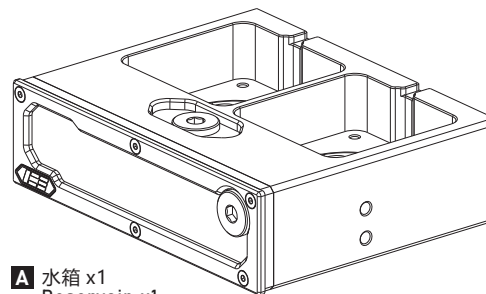

Dimension (尺寸)

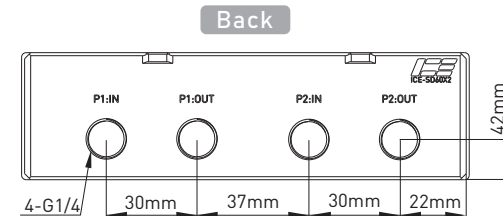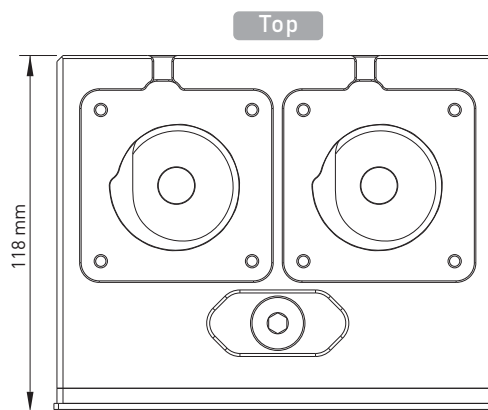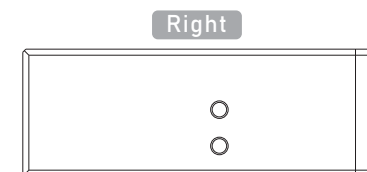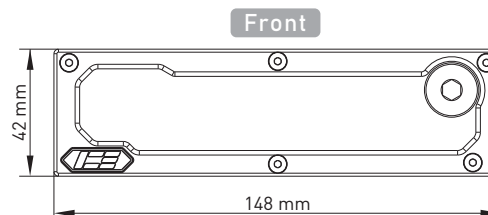

Volume

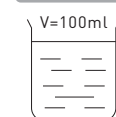

注意:

本水箱在计算机机箱中占用一个5.25"驱动器托架扩展槽, 请保证你的机箱上有足够的空间安装。

CAUTION:

This reservoir requires one 5.25" drive bay in your computer chassis, Please make sure you have enough to install.



警告:

禁止在本产品上使用酒精或含酒精成份的液体!
禁止倒置或侧置使用!

WARNING:


Do not use alcohol or alcoholic liquids on this reservoir!
Do not place upside down or sideways!

本产品仅供专业人士安装。请咨询合格的技术人员进行安装。不正确的安装可能会导致设备损坏。Icemancooler对这些产品的使用及其安装不承担任何明示或暗示的责任。以下说明如有更改, 恕不另行通知。请访问我们的网站获取更新。

This product is intended for experienced users only. Please consult with a qualified technician prior to installation. Improper installation may cause damage to your equipment. Icemancooler assumes no liability whatsoever, expressed or implied, for the use of these products, nor their installation. The following instructions are subject to change without notice. Please visit our web for up to date information.

Installing The Pump (安装水泵)


按图将水泵安装在水箱上，并拧紧螺丝。
Install the water pump in the reservoir and tighten the screws.

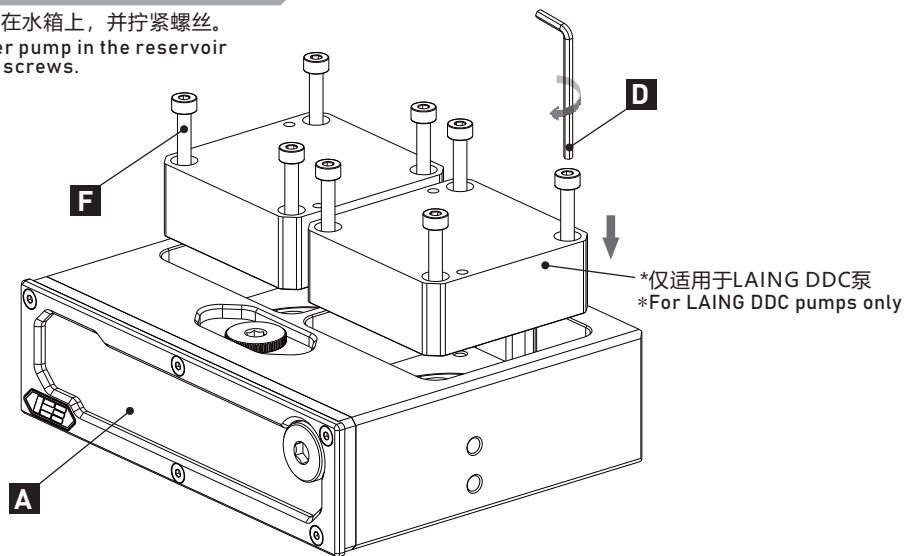

Installing The Reservoir (安装水箱)


STEP 1:

拆除机箱的光驱位面板。
Remove the 5.25" drive bay Panel.

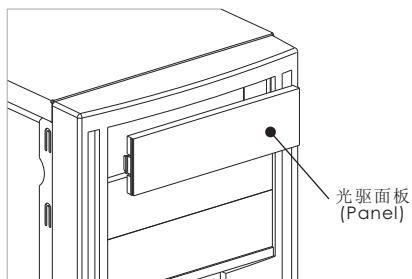


STEP 2:

水箱从机箱前面水平装入，前面与机箱面板对齐。
Slide reservoir horizontally into chassis from front, Align reservoir front panel flush with chassis panel.

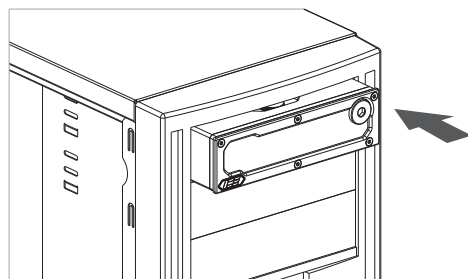


STEP 3:

拧紧水箱固定螺丝。
Tighten the reservoir screws.

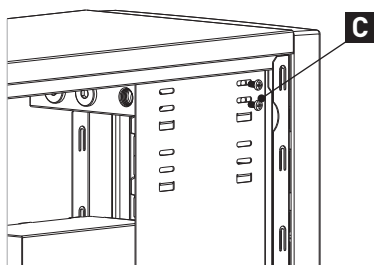


STEP 4:

当管道完全接好后，拧开前面板的堵头，加入冷却液。
When the tube is fully connected, unscrew the plug on the front panel and add the coolant.

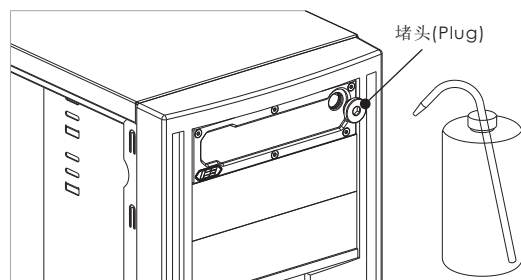

A. Relay pump/Default (水泵串联模式/默认)

拆开底板螺丝，按图示装上3个堵头，装好底板并拧紧螺丝。
Disassemble the screws of the bottom plate, Install three plug as shown, install the bottom plate and tighten the screws.

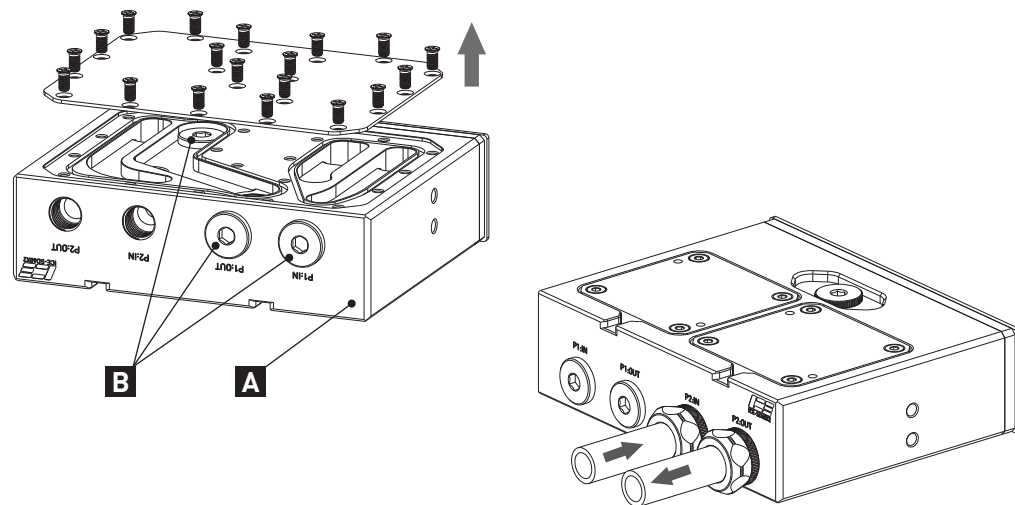

B. Independent pump (水泵独立模式)

拆开底板螺丝，拆开串联模式的3个堵头，按图示装上堵头，装好底板并拧紧螺丝。
Disassemble the screws of the bottom plate, Remove the 3 plugs in Relay pump mode, Install the plug as shown, install the bottom plate and tighten the screws.

