

用户手册 USER GUIDE

显卡水冷头 VGA Blocks



Model : ICE-VG509-R0G
P/N : IWB-VN-R0G509-GL
ASUS ROG Astral GeForce RTX 5090
ASUS ROG Astral GeForce RTX 5090 D


注意事项

1. 请将本产品放置及储存于小孩可接触的范围之外。
2. 安装前请检查产品状况及零件数量，如有任何问题，请联系您所购买的商店以提供换货或退货服务。
3. 本产品请由合格的技术人员进行安装。不正确的安装可能会导致设备损坏。IceManCooler不承担任何不当使用及安装造成的责任。
4. 本产品的保修封条一旦撕开或移除则保修立即失效，IceManCooler将不对此产品提供保修。
5. 本产品保修期限为一年。
6. 本手册如有更改恕不另行通知，请访问我们的网站获取更新。


Note

1. Kee and store the product away from the reach of children.
2. Check the condition and component list of the product,If there is any problem, contact shop where you purchased to get a replacement or refund.
3. This product must be installed by qualified technicians.Incorrect installation may cause damage to the equipment.IceManCooler does not assume any responsibility for improper use and installation.
4. Breaking the warranty seal on the product will result in loss of warranty.
5. Product warranty period is one years.
6. This guide is subject to change without notice,Please browse our website for updates.

配件清单Contents

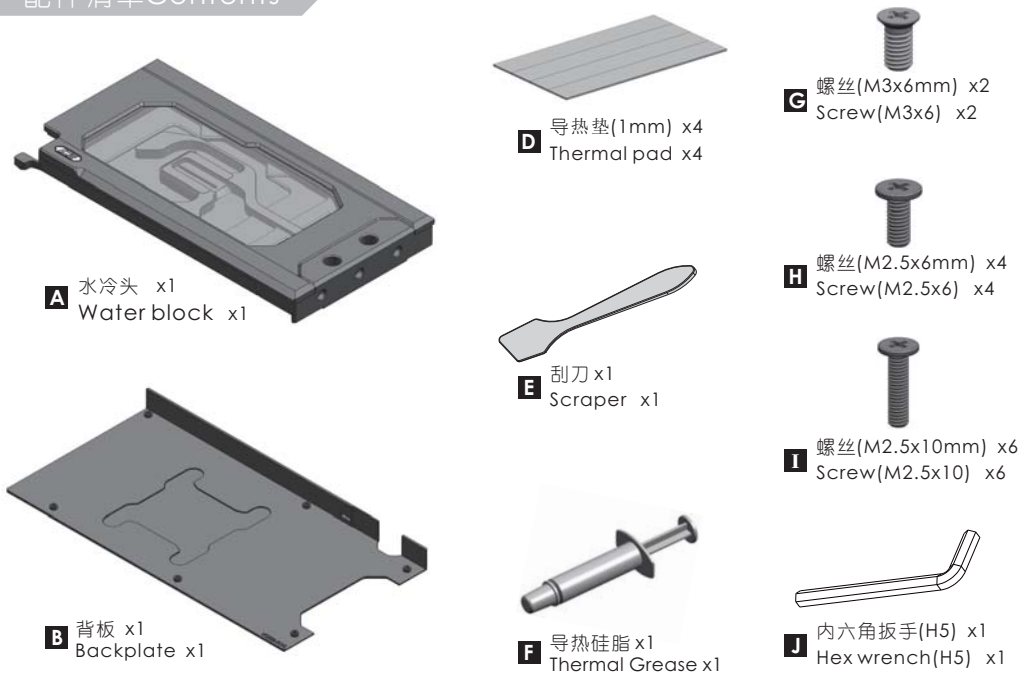


尺寸(Dimension)

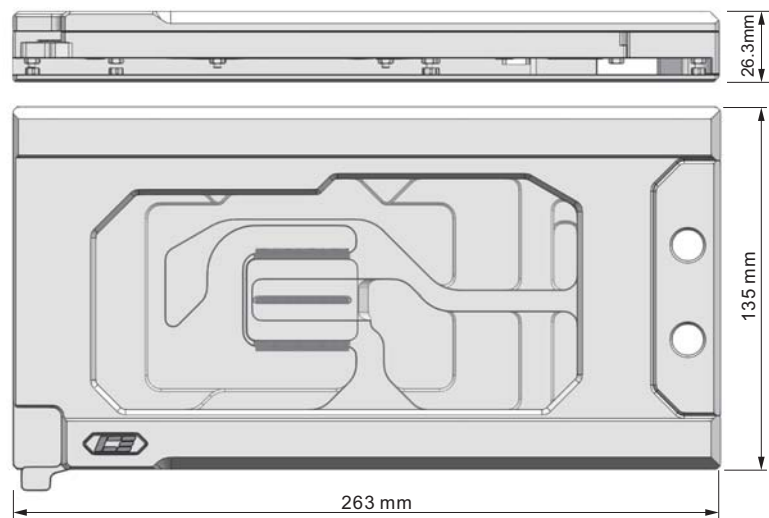


1、安装导热垫(Installing The Thermal pad)

STEP 2:

A.
清洁GPU表面，涂上硅脂。
Clean the GPU surface and
apply thermal grease.

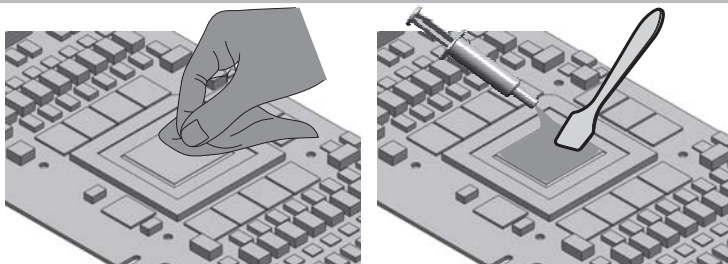


B.
将导热垫贴到图示位置。
Apply thermal pad to the
indicated position.

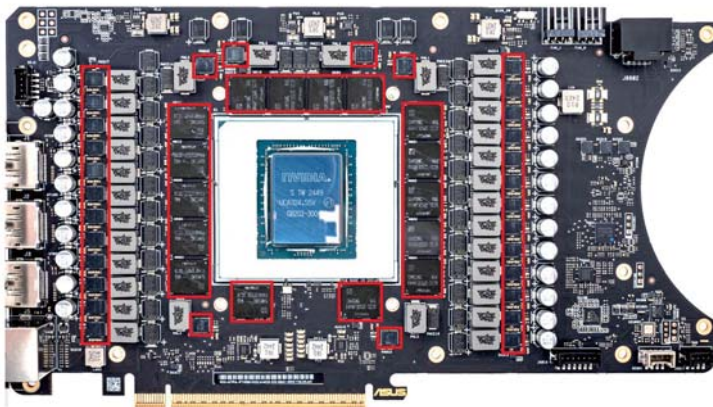

2、安装显卡(Installing The VGA Card)

STEP 3:

将显卡安装到水冷头上，先安装X形支架和4个螺丝，再拧紧另外4个螺丝。
Install the video card on the water block, Install the X-bracket and 4 screws first,
then tighten the other 4 screws.

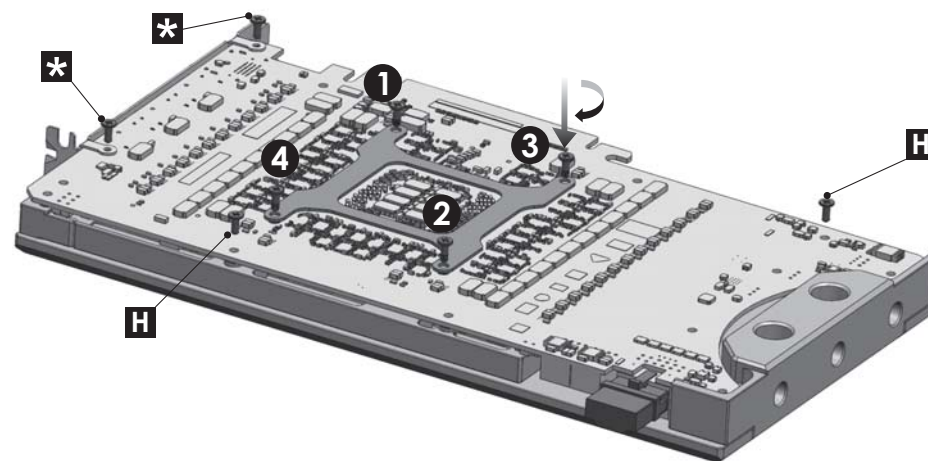


※ X支架螺丝和* 标记螺丝，请使用原装风冷散热器上的螺丝！
For the X bracket screws and the screws marked with *,
please use the original screws from the air cooler!

3、安装PCI支架(Installing The PCI bracket)

STEP 1:

安装PCI支架螺丝。
Install the screws of the PCI bracket.

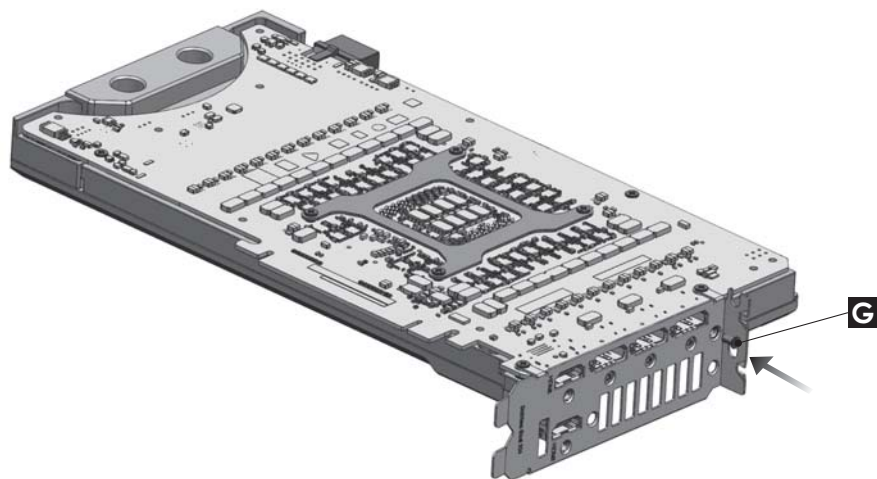

4、安装背板(Installing The Backplate)

STEP 4:

按图示将背板装到显卡背面，并拧紧6个螺丝。
Install the backplane to the back of the graphics card
and tighten the 6 screws.

