IceManCooler

用户手册
USER GUIDE

ICE-TR5
AMD TRX40/50 CPU Block
AMD TRX40/50 CPU 水冷头

注意事项 (Precautions)

本产品仅供专业人士安装。请咨询合格的技术人员进行安装。不正确的安装可能会导致设备损坏。Icemancooler对这些产品的使用及其安装不承担任何明示或暗示的责任。以下说明如有更改，恕不另行通知。请访问我们的网站获取更新。

This product is intended for experienced users only. Please consult with a qualified technician prior to installation. Improper installation may cause damage to your equipment. Icemancooler assumes no liability whatsoever, expressed or implied, for the use of these products, nor their installation. The following instructions are subject to change without notice. Please visit our web for up to date information.
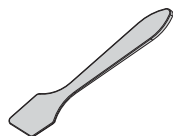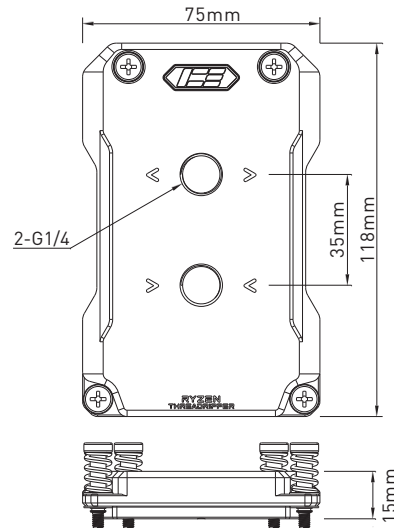
部件(Contents):

A 水冷头 x1
Water block x1
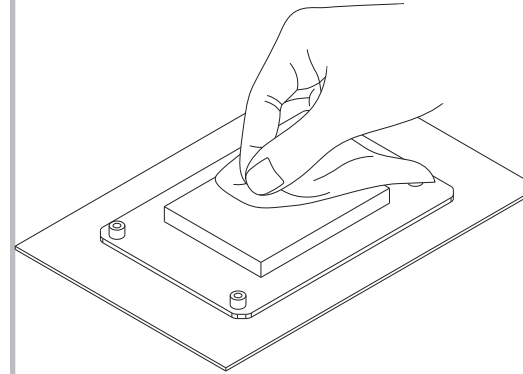
B 导热硅脂 x1
Thermal Grease x1
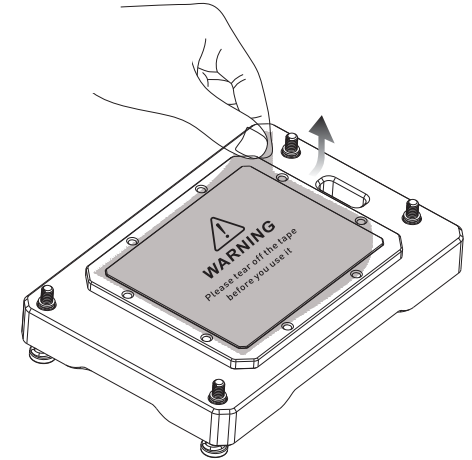
C 刮刀 x1
Scraper x1

尺寸(Dimension):

75mm
118mm
35mm
15mm
2-G1/4

P/N:IWB-CA-TR5-NK

安装水冷头(Installing The Block)

STEP 1

STEP 2

⚠ WARNING Please tear off the tape before you use it

STEP 3

B
C

STEP 4

安装(Installation): ❶ ⇨ ❷ ⇨ ❸ ⇨ ❹
拆卸(Dismantle): ❹ ⇨ ❸ ⇨ ❷ ⇨ ❶