IceManCooler

Delid Die Guard

X299开盖保护器

STEP 1:

用T20扳手按顺序拧松CPU扣具的四个螺丝
Use the T20 screwdriver to loosen the four screws of the CPU clip in order

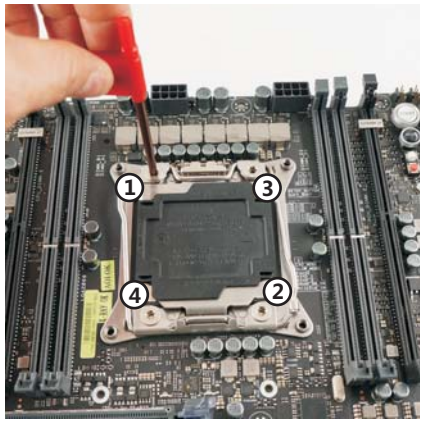

STEP 2:

取下支架,保留背板
Remove the bracket,
Keep original backplate in place

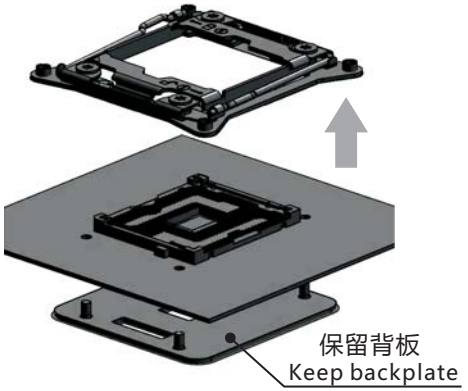

STEP 3:

将CPU装进底座
Put the CPU into the base

STEP 4:

将保护器装在CPU上
Install the Guard on the CPU

STEP 5:

用T20扳手按顺序拧紧四颗螺丝
Use T20 wrench to tighten the four screws in sequence

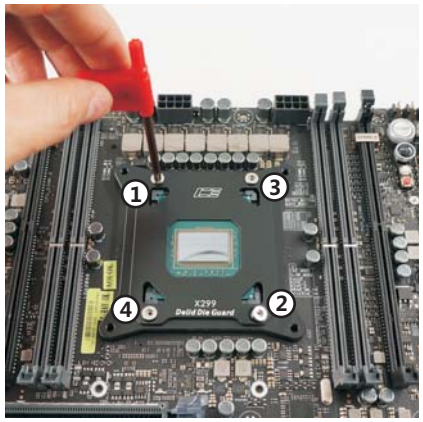

STEP 6:

在CPU核心上涂少许硅脂
Apply a little thermal compound on the CPU Del

STEP 7:

用IC卡在保护器正面刮过去，检查CPU核心与保护器是否齐平
Use a IC card to scratch the front of the protector,check the CPU Die and Guard alignment
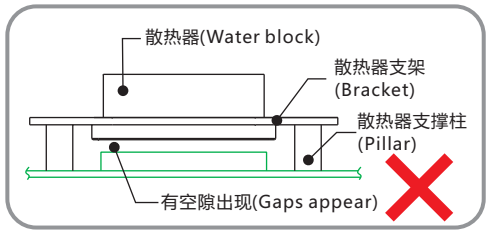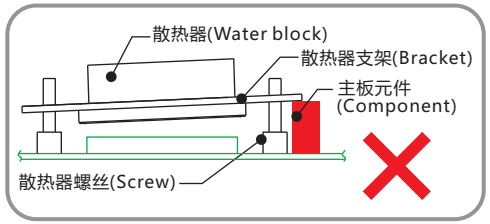
注意：
以下情况表示散热器可能不兼容！
CAUTION:
The following conditions that the radiator may not be compatible!